

X431SSANGYONG DIAGNOSTIC LIST V11.00

MODEL	SYSTEM	SUBSYSTEM	DIAGNOSTIC
CHAIRMAN	ENGINE CONTROL	3.2 BOSCH	1. Read DTC2. Clear DTC 3. Data Stream
		3.2 VDO	
		2.8 VDO	
		2.3 VDO	
	AUTOMATIC TRANSAXLE	BTRA	1. Read DTC 2. Clear DTC
		NGA	
	ANTI-LOCK BRAKE SYSTEM	ABS/ABS 5.3	1. Read DTC 2. Clear DTC 3. Data Stream 4. Actuation Test
ABS/ABD 5.3			
ABS/ASR 5.3			
SRS-AIRBAG			
REXTON	ENGINE CON (GASOLINE)	3.2 VDO	1. Read DTC 2. Clear DTC 3. Data Stream
		2.8 VDO	
		2.3 VDO	
	AUTOMATIC TRANSAXLE	GASOLINE	1. Read DTC 2. Clear DTC 3. Data Stream
	ANTI-LOCK BRAKE SYSTEM		1. Read DTC 2. Clear DTC 3. Data Stream 4. Actuation Test
SRS-AIRBAG		1. Read DTC 2. Clear DTC	
FOUR WHEEL DRIVE SYSTEM			
MUSSO	ENGINE CON (GASOLINE)	3.2 MSE	1. Read DTC 2. Clear DTC 3. Data Stream
		2.3 MSE	
	AUTOMATIC TRANSAXLE	20PIN CONNECTOR	
		16PIN CONNECTOR	
	ANTI-LOCK BRAKE SYSTEM	ABS 5.0	1. Read DTC 2. Clear DTC 3. Data Stream 4. Actuation Test
		ABS/ABD 5.0	
		ABS/EBD 5.3	
ABD/EBD 5.3			
FOUR WHEEL DIRVE SYSTEM		1. Read DTC 2. Clear DTC	
KORANDO	AUTOMATIC TRANSAXLE	20PIN CONNECTOR	1. Read DTC 2. Clear DTC 3. Data Stream
		16PIN CONNECTOR	
	ANTI-LOCK BRAKE SYSTEM	ABS 5.0	1. Read DTC 2. Clear DTC 3. Data Stream 4. Actuation Test
		ABS/ABD 5.0	
		ABS/EBD 5.3	
ABD/EBD 5.3			
FOUR WHEEL DIRVE SYSTEM		1. Read DTC 2. Clear DTC	
STANA	ANTI-LOCK BRAKE SYSTEM		1. Read DTC 2. Clear DTC 3. Data Stream 4. Actuation Test